


NISSAN GTR R35 CARBON FIBER INTAKE PIPE



1. Nissan GTR Engine Bay with Aluminum Pipes

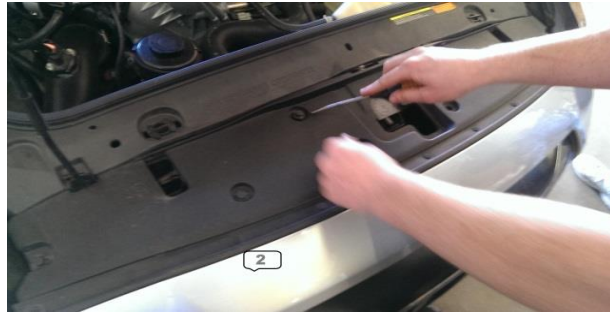

2. Remove the Front Bumper Upper Panel by Pop up the Plastic Clips



3. MAF Sensor Location



4. Unplug the MAF Sensor on Both sides



5. Loosen up the Upper Hard Pipes on both sides



6. Disconnect the Negative Cable on Both sides



7. Remove the Sensor Wire Brackets on Both Sides, See Bottom Pictures



8. RH and LH Wire Sensor Brackets, Required Removed to be able to Install the CF Intake Pipes

Top Speed Auto Accessories, Inc.

4109 Billy Mitchell Dr. Addison, Texas 75001 Tel. 972.233.0888



9. Need to Pre Align the Stock MAF Sensor to the CF Pipe Sensor Opening, Than required to drilled the Fitting Holes by 1/8" Drill Bits



10. MAF Sensors Mounted back on to the CF Pipe



11. Using 2.75"-2.5" Reducers and Clamp to the Turbo Housing, Plug the MAF sensor Wire Back on to the MAF Sensor



12. Same Procedures Apply to the Other Side



13. Over All View of the CF Pipe installed



14. Mount the Upper Hard Pipes back on both sides



15. Complete View of CF intake Pipes Installed



16. Passenger Side View



17. Driver Side View



18. Overall Side View of Complete Installed



20. Upper Overall View of Completed Installed

